


#### Removal

---

- 1 Compress spreader clip (arrow) behind accelerator pedal and pull out. Slightly raise accelerator pedal and then pull out in downward direction.

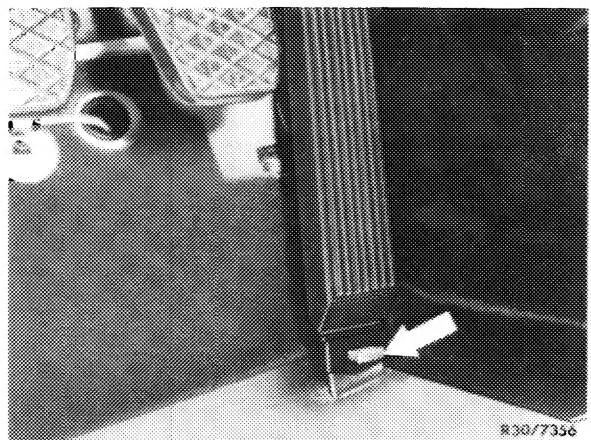

#### Installation

---

- 2 For installation proceed vice versa. Make sure that the spreader clip is reliably engaging.